




Photive Rain Speaker Replacement

Replace the speaker in your Photive Rain.

Written By: Shozaf Zaidi

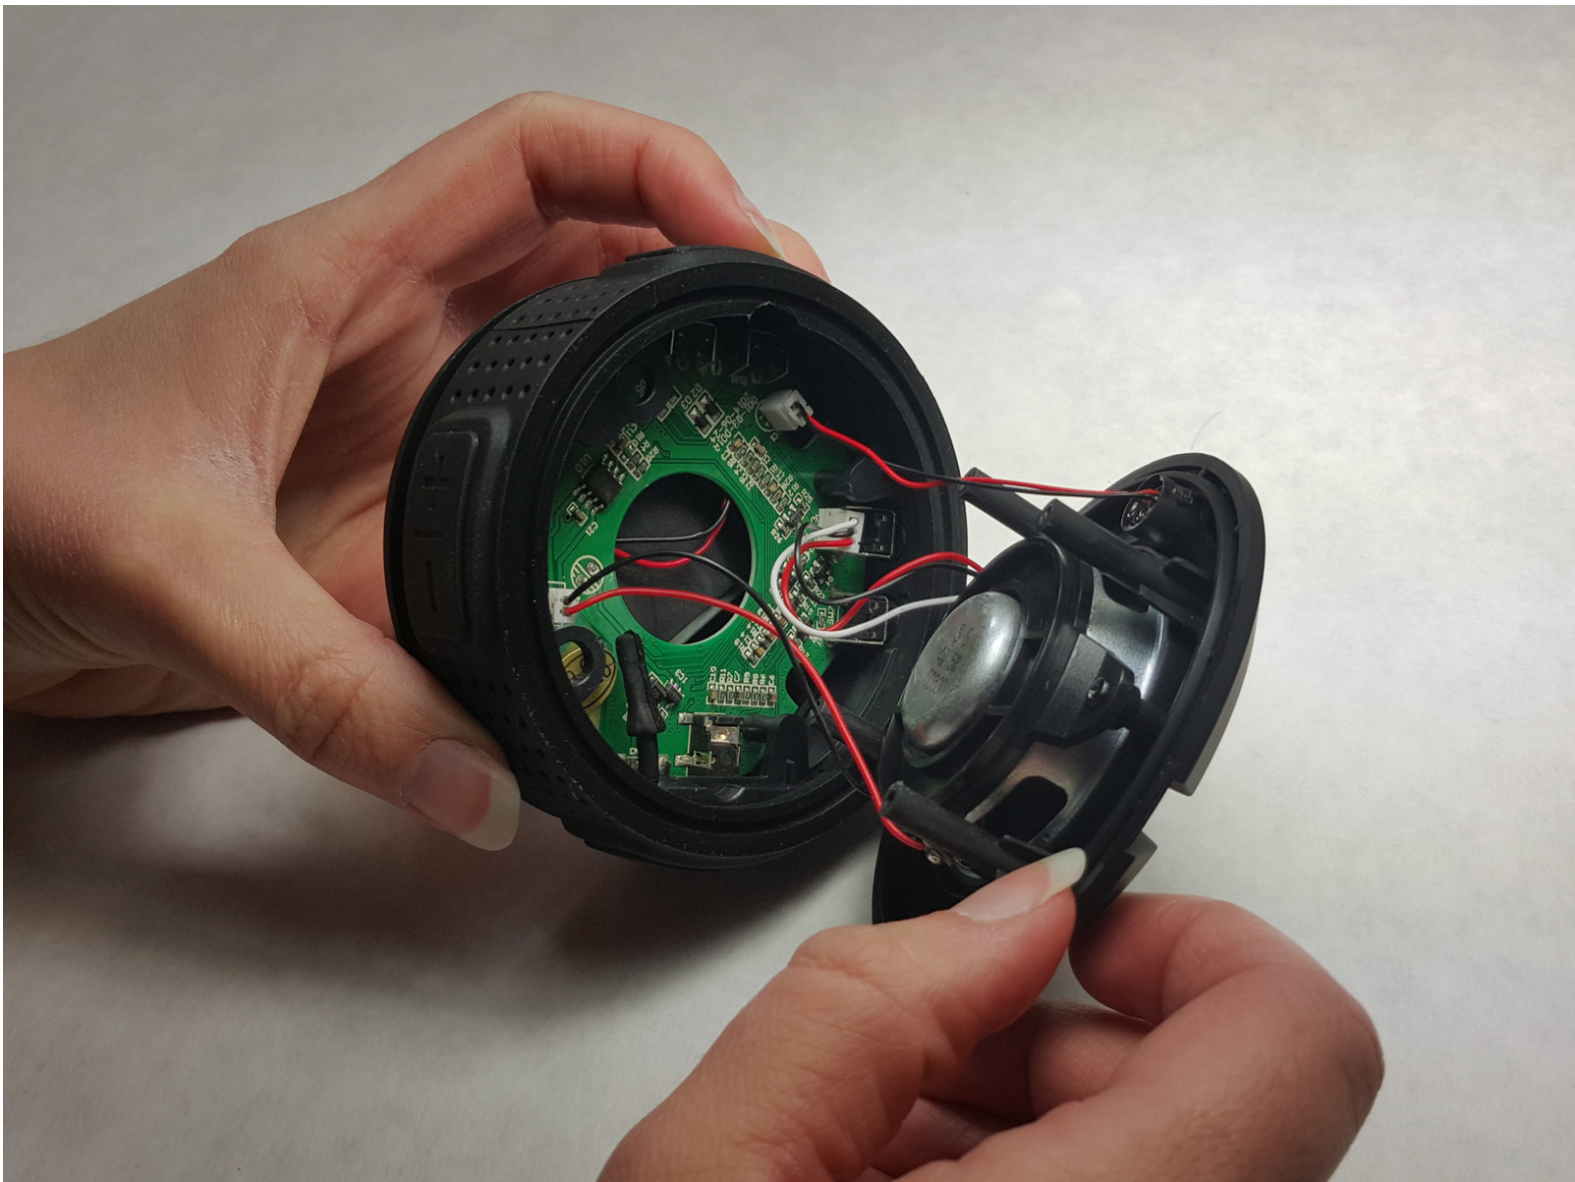

INTRODUCTION

Does the sound coming from your device sound rough? Does your device not emit any sound having ruled out the battery or the volume as the cause? Then the speaker may be the problem. This guide goes through the steps necessary to remove the speaker.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Panel




- ❗ Power off the speaker before beginning disassembly.
- Pull the suction cup from its groove in the back of the speaker. Twist and turn the suction cup as needed to remove it.

Step 2




- Remove the four 8.5 mm screws from the back panel of the speaker.
- Remove the back panel.
- ⚠ Pull the back panel away carefully. The battery and speaker are both wired directly to the motherboard.

Step 3 — Speaker

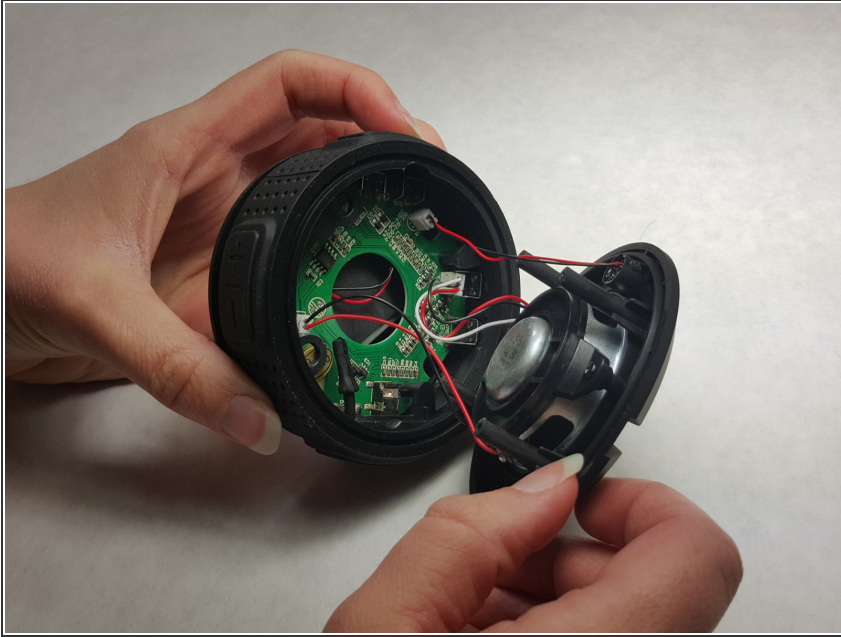


- Carefully pull the front panel apart from the device.

Step 4

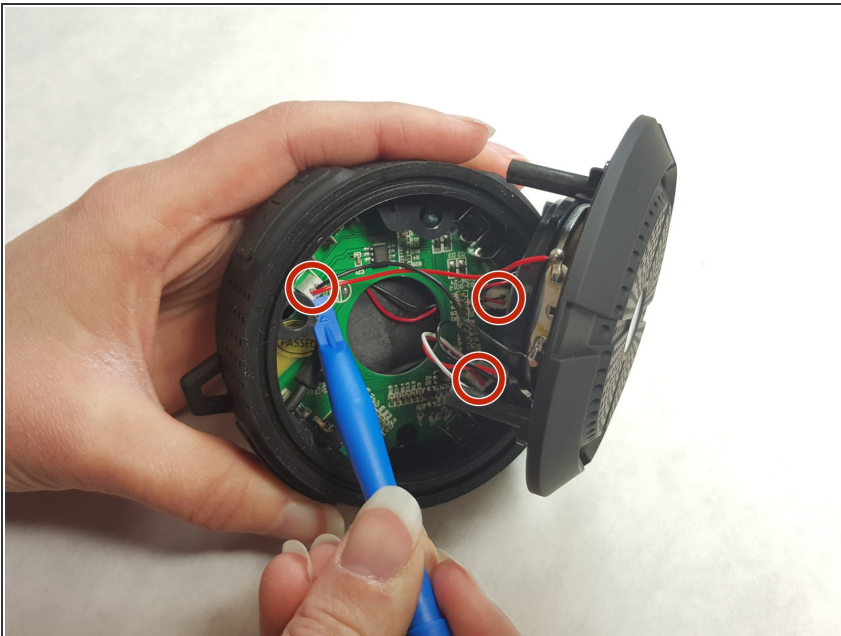

- Detach the plastic speaker connections from the motherboard using a large, blue plastic opening tool.
- Some force may be necessary to remove the plastic clips.

Step 5

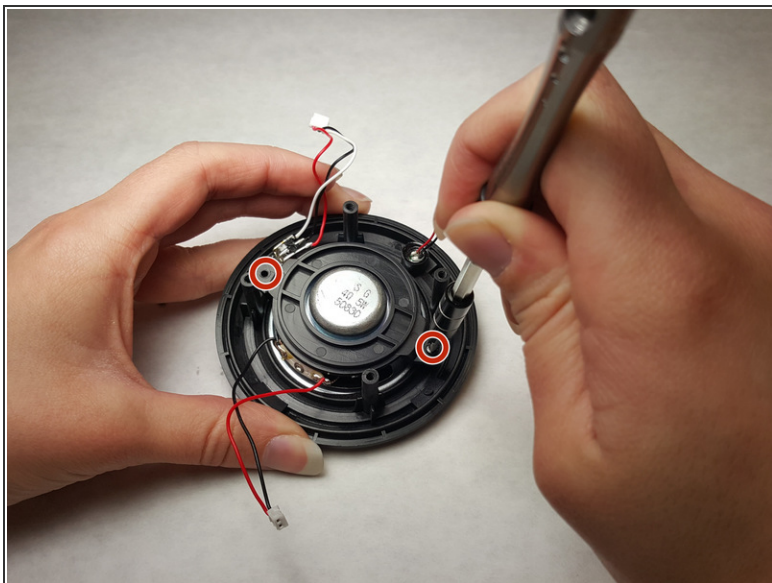

- After the speaker and the front panel are detached, remove the cover that holds the speaker to the front panel.

- Two Phillips 8.5mm Screws

 The second photograph displays a properly removed speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 10:09:47 PM.